



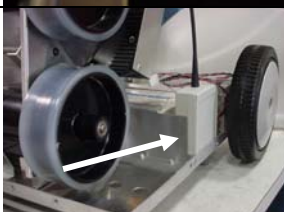
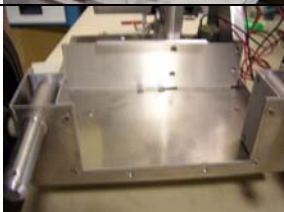


Elite Replacement Part Instructions


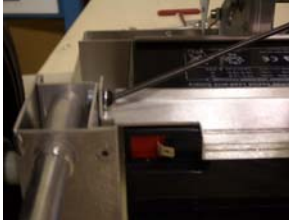
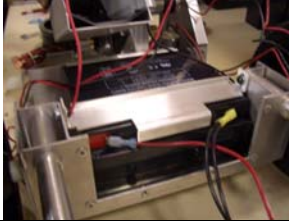
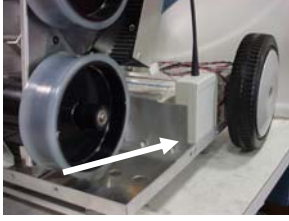

Warning: Turn off machine before performing repairs or installations.

Replacing and Installing a New Elite Battery

Step	Description	Tools	Picture
1	Place the machine on a table or work bench. Remove the red case by removing (6) six screws on the sides of the machine. There are (2) two screws on the front and back side, as well as one on each side of the machine.	Phillips Screw Driver	
2	Gently lift up the case. Be careful to leave all the wires connected to the electronic board. Rest the case on the top side as shown.		
3	To Remove the Existing Battery Disconnect the red and black connections on the old battery.		
4	Use a 5/32 Allen Wrench to loosen the two (2) screws of the battery brace.	5/32 Allen Wrench	
5	You may have to remove your existing remote receiver box to replace your battery. The remote box is located next to the battery on the back left side of the aluminum frame. Remove the two screws on the frame and take out the old receiver box.	#1 Phillips Screw Driver	
6	Remove the old battery and clean the surface before placing the new battery.	Damp cloth or small vacuum	

Elite Replacement Part Instructions

Warning: Turn off machine before performing repairs or installations.

Step	Description	Tools	Picture
7	To Install a New Battery Place the battery securely in place. If you have a remote ensure that the wires from the receiver box are not pinned under the new battery.		
8	Replace the battery brace onto the new battery with a 5/32 Allen Wrench and the two (2) screws.	5/32 Allen Wrench	
9	Reconnect the red and black wires to the new battery. The red wire is connected to the red/positive terminal (left) and the black wire to the black/negative terminal (right) connection on the battery.		
10	Place the remote on its original position. The flat side of the box should be against the aluminum frame. The wire connections of the receiver box should be next to the battery. Re-attach the remote to the aluminum frame with the two long screws.	#1 Phillips Screw Driver	
11	Ensure that all wires are securely connected. Place the case back on to the machine by re-attaching the six machine screws.		
12	Test the functions of the machine including, power switch, elevation, sweep, and feed. If there are any problems, the first step is to ensure that all the wires are connected to the electronic board.		

How to Order Elite Replacement Parts	Elite Parts		
Website: http://www.lobsterinc.com/html/troubleshooting.html Email: sales@lobsterinc.com Phone: (800) 526-4041 Fax: (818) 764-6061 We accept Visa, MasterCard or Discover, Check, Money Order or COD.	E201	Battery 12 Volt	\$70
	E024	Battery Brace	\$8