


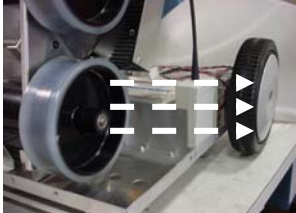
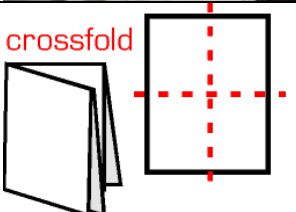



Elite Replacement Part Instructions

Warning: Turn off machine before performing repairs or installations.




Replacing and Installing a New Elite Server Wheel Assembly

Step	Description	Tools	Picture
1	Place the machine on a table or work bench. Remove the red case by removing six (6) screws located around the bottom of the machine. There are two (2) screws on the left and right side, as well as two (2) on the back of the machine below the control panel. One (1) on each side.	Phillips Screw Driver	
2	Gently lift up the case. Be careful to leave all the wires connected to the electronic board. Rest the case on the top side as shown.		
3	The server wheels are connected using set screws. Remove one screw from the server wheel hub using a 1/8" Allen Wrench.	1/8" Allen Wrench	
4	Remove the wheel from the motor shaft.	Small Hammer, if necessary	
5	Take a piece of paper and fold it in half two times. You will use this to maintain the required space between the wheel and the aluminum frame.	8 1/2 x 11 in. paper	
6	Attach the new server wheel by sliding the wheel onto the wheel shaft. Keep the folded paper in between the wheel and aluminum frame.	8 1/2 x 11 in. white paper	



Elite Replacement Part Instructions

Warning: Turn off machine before performing repairs or installations.

Step	Description	Tools	Picture
7	Before tightening, align the set screw with the flat part of the motor shaft. You must secure the set screw onto the flat part of the motor shaft.	1/8" Allen Wrench	
8	Remove the paper. Check the wheel is installed properly by spinning the wheel freely. Repeat these steps for the second server wheel, if necessary.		
9	Ensure that all wires are connected to the electronic board.		
10	Place the case back on to the machine by re-attaching the six machine screws.	Phillips Screw Driver	
11	Test the functions of the machine including, power switch, elevation, sweep, and feed. If there are any problems, the first step is to ensure that all the wires are connected to the electronic board.		

How to Order Elite Replacement Parts	Elite Parts
Website: http://www.lobsterinc.com/html/troubleshooting.html Email: sales@lobsterinc.com Phone: (800) 526-4041 Fax: (818) 764-6061 We accept Visa, MasterCard or Discover, Check, Money Order or COD.	E003 Server Wheel Assembly \$59
	E322 Set Screw \$0.50