


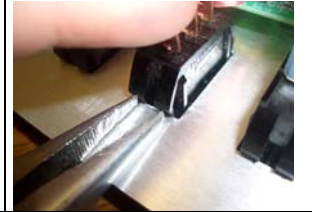




Elite Replacement Part Instructions



Warning: Turn off the machine before performing any repairs or installations.




Replacing and Installing a New 2-Line Rocker Switch

Step	Description	Tools	Picture
1	Place the machine on a table or work bench. Remove the control panel by taking out the four screws, one at each corner. Carefully pull the control panel forward.	Phillips Screw Driver	
2	Let the control panel hang out of the machine	Phillips Screw Driver	
3	Remove the wires from the switch		
3	Use pliers to depress the locks on the switch. Push down on the switch and it will partly loosen from the panel.	Needle Nose pliers	
3	Depress the locks on the other side of the switch and push down and the switch will fall out of the panel.		
3	Push the new switch into place by pressing firmly until the switch is locked into place.		

Elite Replacement Part Instructions



Warning: Turn off the machine before performing any repairs or installations.

3	Replace each wire to the new switch with the yellow wire in the closest connector to the board. The thick red wire will go into the middle connector, and the blue wire will go into the last connector that is furthest away from the board.		
3	When completed, all the wires will match up to the picture.		
3	Ensure that all wires are securely connected. Set the control panel back into its place and secure it with the four screws.		
3	Test the functions of the machine including power, elevation, sweep, and feed. If there are any problems, the first step is to ensure that all the wires are connected to the electronic board		

How to Order Elite Replacement Parts	Elite Parts
<p>Website: http://www.lobsterinc.com/html/troubleshooting.html Email: sales@lobsterinc.com Phone: (800) 526-4041 Fax: (818) 764-6061 We accept Visa, MasterCard or Discover, Check, Money Order or COD.</p>	<p>E271 2-Line Rocker Switch \$3</p>