





# Elite Replacement Part Instructions

**Warning: Turn off machine before performing repairs or installations.**

Transport Wheel Fix			
Step	Description	Tools	Picture
1	Place the machine on a table or work bench. Remove the red case by removing (6) six screws on the sides of the machine. There are (2) two screws on the front and back side, as well as one on each side of the machine.	Phillips Screw Driver	
2	Gently lift up the case. Be careful to leave all the wires connected to the electronic board. Rest the case on the top side as shown.		
3	Attach Transport Wheels by putting the axle through the wheel cover, transport wheel, spacer, and into the chassis holes as illustrated. Tighten the axle by screwing the self-locking screw and washer into the axle threads.	5/32" Hex Tool	
4	Ensure that all wires are securely connected. Place the case back on to the machine by re-attaching the six machine screws.		
5	Test the functions of the machine including, power switch, elevation, sweep, and feed. If there are any problems, the first step is to ensure that all the wires are connected to the electronic board.		

How to Order Elite Replacement Parts	Elite Parts		
<b>Website:</b> <a href="http://www.lobsterinc.com/html/troubleshooting.html">http://www.lobsterinc.com/html/troubleshooting.html</a> <b>Email:</b> <a href="mailto:sales@lobsterinc.com">sales@lobsterinc.com</a> <b>Phone:</b> (800) 526-4041 <b>Fax:</b> (818) 764-6061 We accept Visa, MasterCard or Discover, Check, Money Order or COD.	<b>E308</b>	Transport Wheel	\$8
	<b>E309</b>	Wheel Lock Washer	\$0.25