



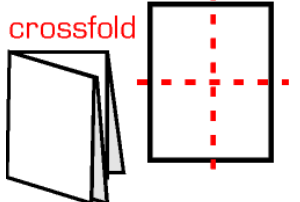






Elite Troubleshooting Instructions

Warning: Turn off machine before performing repairs or installations.

Troubleshoot for Three or Four Flashes on Control Panel.

You may also use this to check for a ball jam and to tighten a loose server wheel assembly.

Step	Description	Tools	Picture
1	When calling Lobster Sports with a troubleshooting question, please have your machine serial number available. It can be found on the underside of your machine.		
2	If you observe the green LED light on your control panel flash three (3) or four (4) times, check if a ball has become jammed under or in between the throwing wheel inside the machine. Turn the machine off and look inside. If you see a jam, turn the machine on and raise the elevation to free the ball. Then turn the machine off and remove the trapped ball. Be sure that any time you are looking in the machine the power is off and the server wheels are not spinning. Stay behind machine when it is on.		
3	<p>3 or 4 LED Flashes – Top or Bottom Server Wheel Error</p> <p>Check if the top or bottom server wheel assembly is rubbing against the case or motor housing. To check, turn off the machine and attempt to spin the wheel freely. If it does not spin freely and the wheel is not touching the case, go to Step 4.</p> <p>If the server wheels are spinning freely and there is no ball jam, skip to Step 10.</p>		
4	Place the machine on a table or work bench. Remove the red case by removing (6) six screws on the sides of the machine. There are (2) two screws on the front and back side, as well as one on each side of the machine.	Phillips Screw Driver	
5	Gently lift up the case. Be careful to leave all the wires connected to the electronic board. Rest the case on the top side as shown.		
6	Take a white piece of paper and fold it in half two times. You will use this to maintain the required space between the wheel and the aluminum frame.	8½ x 11 in. white paper	<p>crossfold</p> 

7	Insert the folded paper in between the wheel and the aluminum frame. If there is no gap for the paper to fit, you must loosen and reposition the wheel.	8 ½ x 11 in. white paper	
8	Reattach the Server Wheel Keep the folded paper in between the wheel and aluminum wheel. Slide the wheel onto the wheel shaft. Align the set screw with the flat part of the motor shaft and tighten.	1/8" Allen Wrench	
9	Remove the paper. Check the wheel is installed properly by spinning the wheel freely. Repeat these steps for the second server wheel, if necessary.		
10	Go to the Control Panel and turn on the machine. If you still observe the three (3) or four (4) LED flashes, contact Lobster Sports with your machine's serial number to replace a chip on your electronic board.		
11	Ensure that all wires are securely connected. Place the case back on to the machine by re-attaching the six machine screws.		
12	Test the functions of the machine including, power switch, elevation, sweep, and feed. If there are any problems, the first step is to ensure that all the wires are connected to the electronic board.		

How to Order Elite Replacement Parts	Elite Parts	
Website: http://www.lobsterinc.com/html/troubleshooting.html Email: sales@lobsterinc.com Phone: (800) 526-4041 Fax: (818) 764-6061 We accept Visa, MasterCard or Discover, Check, Money Order or COD.	E003 - Server Wheel Assembly	\$59
	E322 - Set Screw	\$0.50
	CS008B04 – Chip	