



Lobster's **New** Elite Model 3 Triple Oscillation features a random pattern of balls across the width of the singles court and from the baseline to the service line. Plus, the Model 3 offers a dual, two-line features that feeds two pre-programmed shots at a narrow or wide option.

Triple Oscillation allows the use three options:

1. Random Horizontal: Left/Right shots
2. Random Vertical: Short/Deep shots
3. Random Vertical & Horizontal: Short/Deep
Left/Right shots

Dual, Two-line offers these preprogrammed options:

1. Narrow forehand and backhand sweeping shots
2. Wide forehand and backhand sweeping shots

SETUP INSTRUCTIONS FOR OPTIMUM RANDOM VARIATION

Random Horizontal/Vertical Oscillation

- Turn the Power switch on.
- Set the speed between 50 and 60 mph.
- During the 20-second delay, lower the elevation to its lowest setting, keying off the elevation indicator on the front of the machine.
- Turn on the Vertical oscillation switch – the machine will now oscillate up and down.
- Turn off the Vertical oscillation at the lowest elevation level.
- Turn on the feed and throw 5-10 balls in the hopper.
- Raise the elevation until the balls are skimming 1-2 inches over the net.
- Turn on the vertical oscillation. If any balls hit the net, adjust the elevation up. If any balls shoot past the baseline, adjust the elevation down.
- Turn the feed to 0 and fill the hopper.
- Turn the feed to 8 for optimum results.
- Enjoy short/deep shots.
- Then turn on the Horizontal oscillation switch for random left/right, short/deep.

SETUP INSTRUCTIONS FOR TWO-LINE OSCILLATION

Narrow/Wide, Two-line Oscillation

- Fill the hopper.
- Turn the Power switch on.
- Set the desired speed. Turn on horizontal oscillation.
- During the 20-second delay, select switch for narrow or wide two-line function on the control panel.
- Enjoy forehand and backhand shots.

CHARGING INSTRUCTIONS FOR THE FAST CHARGER

Charging the battery with the Fast Charger

If charging the machine with a fast charger, the normal charging LED indicators on the control panel are bypassed. Trickle charge technology ensures the battery will not overcharge.

- Insert the fast charger red/black connector into the red/black charger coupling on the control panel.
- Plug the fast charger into a live electrical outlet. The battery will charge in approximately 3-9 hours.
- An orange light on the charger indicates the battery is charging. A green light on the charger indicates the battery is fully charged.
- For optimal battery capacity, charge the battery with the fast charger after each use and leave it plugged in until next use.

Using the machine with the Fast Charger

To use the machine with the fast charger plugged in, ensure the battery is at 30-50% capacity.

- Insert the fast charger red/black connector into the red/black charger coupling on the control panel. Plug the fast charger into a live electrical outlet. Power the machine and play.
- The fast charger will extend the battery life by 1-2 hours. It will NOT charge the battery and power the machine at the same time.